

STAR WARS™

SHATTERPOINT™


SWP06 (A)-OBI-WAN KENOBI

READ THIS FIRST


Be sure to use a pair of sharp hobby clippers to remove the miniature components from the sprue. Carefully clean the excess material and mold lines via sharp hobby knife. Check the fit of each part before gluing. Use a small amount of hobby plastic glue to assemble the components. Use caution with all products and follow all manufacturer instructions. Adult supervision is recommended for children under the age of 16. Have fun!

JOIN THE COMMUNITY


Use #ShatterPaint to share your miniature photos and be a part of the Star Wars™: Shatterpoint community!




1

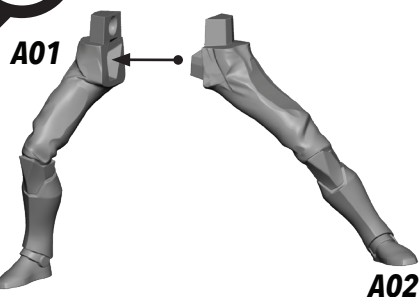

2

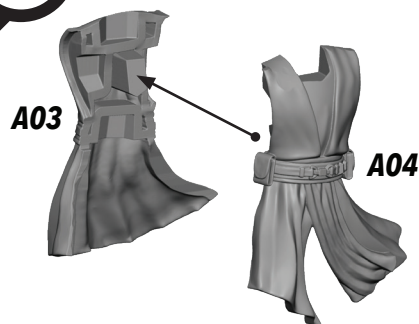

3

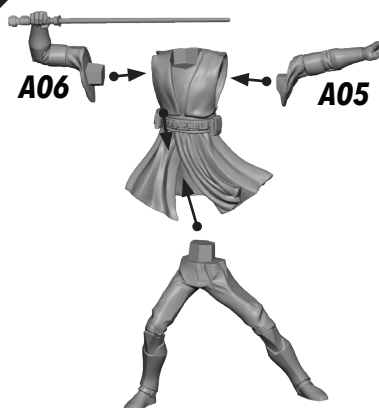

4



5




FINAL




ALL PARTS SHOULD BE ASSEMBLED USING PLASTIC GLUE. PERMISSION GRANTED TO PRINT OR PHOTOCOPY FOR PERSONAL USE.

SWP06 (B)-CODY


1

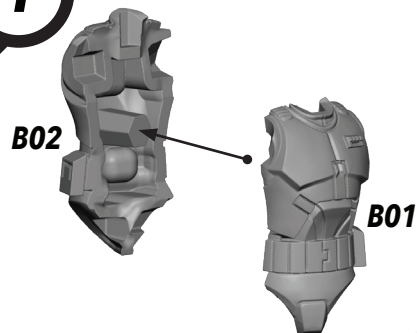


2

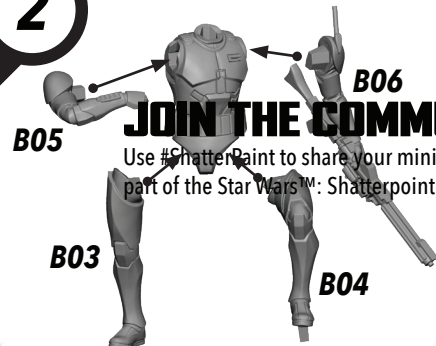

3

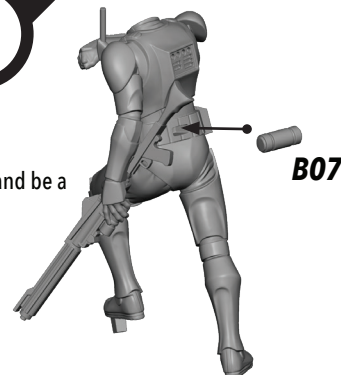


4

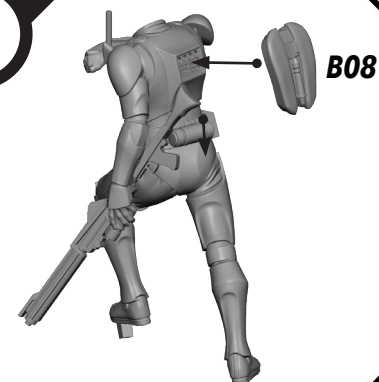


5



6

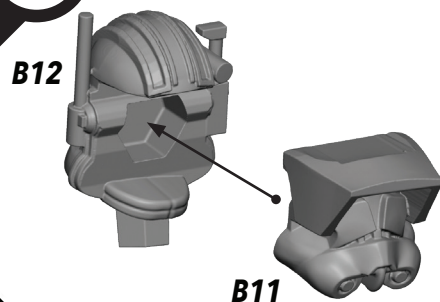

7

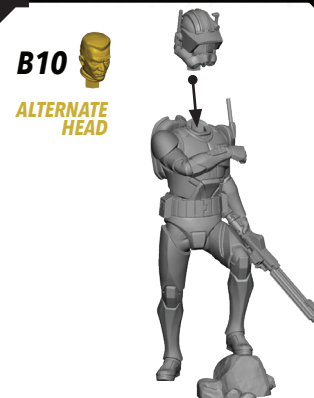

FINAL



JOIN THE COMMUNITY


Use #ShatterPaint to share your miniature photos and be a part of the Star Wars™: Shatterpoint community!

ALL PARTS SHOULD BE ASSEMBLED USING PLASTIC GLUE. PERMISSION GRANTED TO PRINT OR PHOTOCOPY FOR PERSONAL USE.

SWP06 (C)-CLONE TROOPER POSE A

1

C02

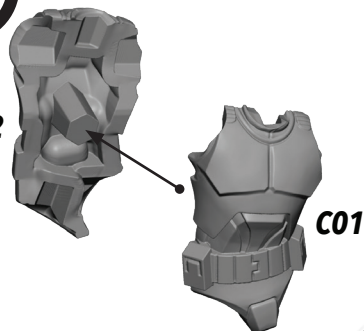

2

C07

JOIN THE COMMUNITY

Use #ShatterPaint to share your miniature photos and be a part of the Star Wars™: Shatterpoint community!

C03

C04




3

C05



4

C08

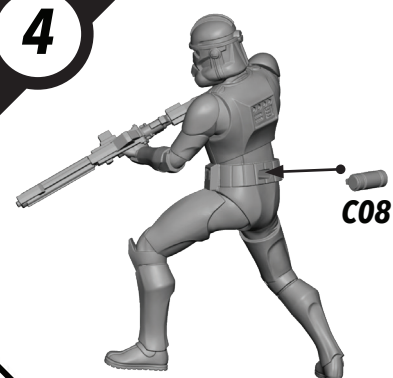


FINAL



ALL PARTS SHOULD BE ASSEMBLED USING PLASTIC GLUE. PERMISSION GRANTED TO PRINT OR PHOTOCOPY FOR PERSONAL USE.

SWP06 (D)-CLONE TROOPER POSE B

1

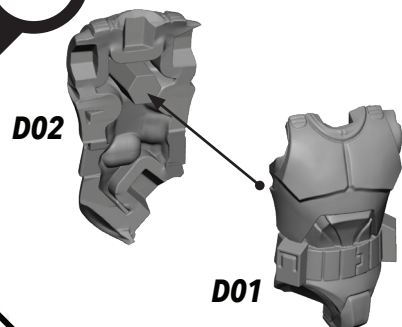


2




JOIN THE COMMUNITY

Use #ShatterPaint to share your miniature photos and be a part of the Star Wars™ Shatterpoint community!


3

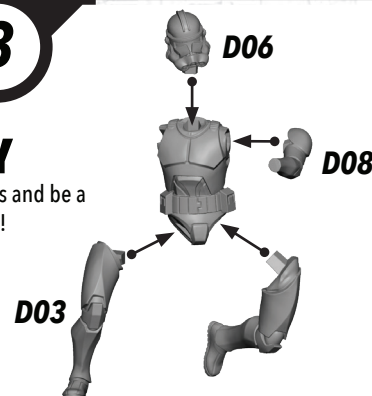

4

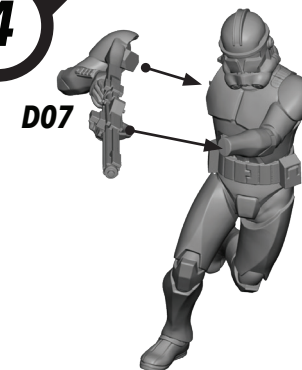

5

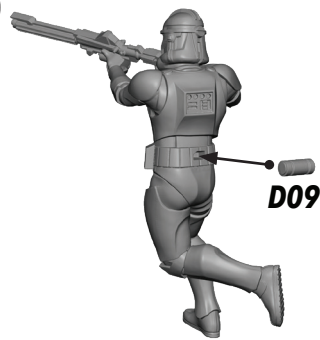

FINAL



ALL PARTS SHOULD BE ASSEMBLED USING PLASTIC GLUE. PERMISSION GRANTED TO PRINT OR PHOTOCOPY FOR PERSONAL USE.